




ZODIAC®

Owner's Manual

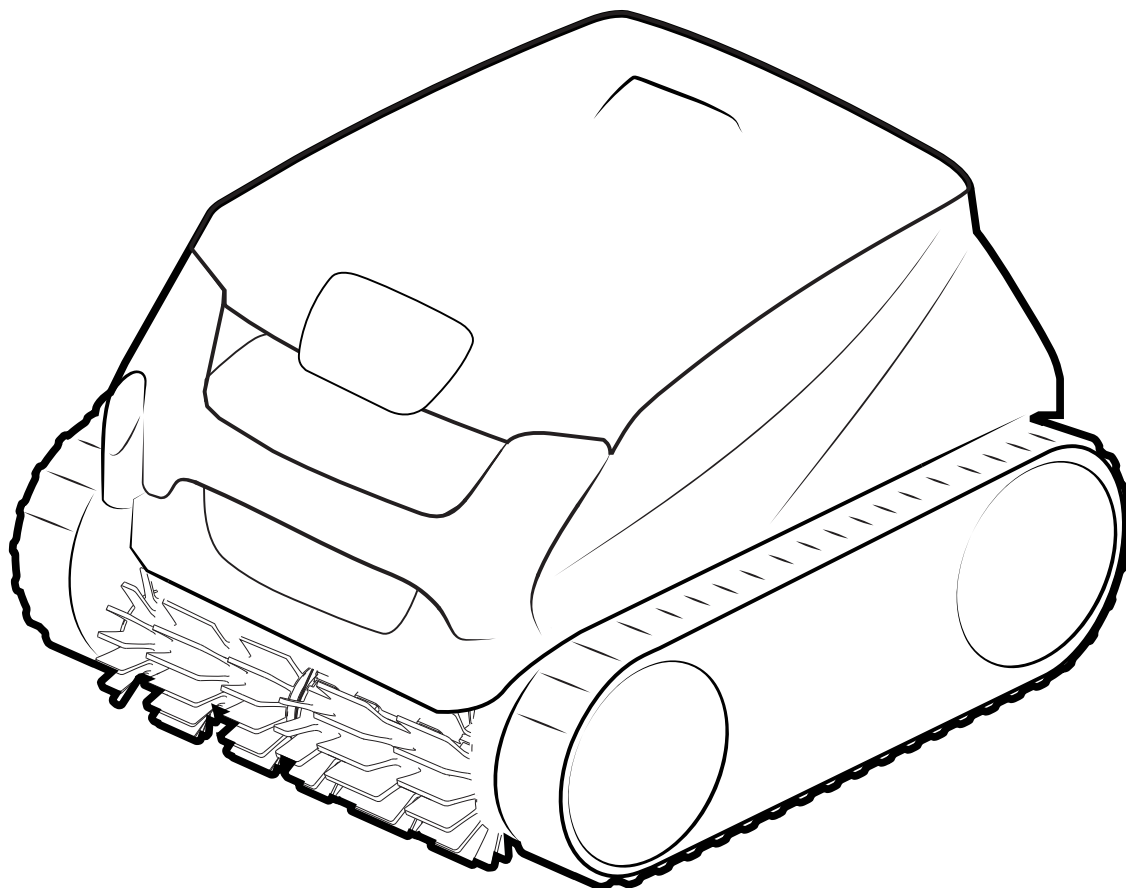

Freerider™ Cordless Robotic Cleaner

FR1000 iQ
FR2000 iQ

TYPE EC35--

⚠ WARNING

FOR YOUR SAFETY – For anything other than the routine cleaning and maintenance described in this guide, this product must be serviced by a qualified professional with sufficient experience in pool equipment installation and maintenance so that all of the instructions in the product's complete installation and operations manual can be followed exactly. All safety instructions in the complete manual must be followed explicitly in order to prevent injury hazards. Improper installation and/or operation may void the warranty. Never turn the cleaner on unless it is fully submerged in the water. Doing so may void the warranty and may cause severe damage to the cleaner motors.

Table of Contents

Section 1. Important Safety Instructions.....	3	5.2 Set Cleaning Mode.....	12
Section 2. Cleaner Specifications	5	5.3 In-App Error Messages and Troubleshooting.....	13
2.1 General Specifications	5	5.4 System Settings	13
2.2 Contents.....	5	Section 6. Maintenance.....	13
2.3 Assemble the Charging Station.....	5	6.1 Clean the Cleaner and Charging Station	13
2.4 Information/Status LEDs.....	6	6.2 Clean the Filter Canisters.....	14
2.5 Charging Station Status*.....	7	6.3 Storage.....	14
Section 3. General Cleaner Operation	7	6.4 Replacing Wear Parts.....	15
3.1 Set Up and Charging.....	8	6.5 Replacing Tracks.....	16
3.2 Start Cleaner	8	6.6 Recycling & Disposal.....	17
3.3 Install and Submerge the Cleaner	9	Section 7. Troubleshooting	17
3.4 Remote Control	9	7.1 General Troubleshooting	17
3.5 Removal	10	7.2 Charging Station Behavior	18
Section 4. Installing iAquaLink®	11	7.3 Cleaner Error Codes.....	19
4.1 Download the App	12	7.4 Battery Error	20
4.2 Sign Up and Log In	12	7.5 Remote Error *.....	21
4.3 Configure the System.....	12	7.6 Dismissing an Error Code	21
Section 5. iAquaLink® Control	12	7.7 iAquaLink® Troubleshooting	21
5.1 iAquaLink® Control Home Screen	12		

SAVE THESE INSTRUCTIONS

Section 1. Important Safety Instructions

READ AND FOLLOW ALL INSTRUCTIONS

Congratulations on purchasing this Zodiac Robotic Pool Cleaner. Please read through the entire manual before installing your new robotic pool cleaner. Your cleaner must be installed and operated as specified.

WARNING

Failure to comply with the following warnings can result in permanent injury, electrocution or death.

PREVENT ELECTRICAL SHOCK

To reduce risk of electrical shock:

- Please read the manual carefully, especially the safety instructions, and make sure you understand them fully before using the product. Only use the equipment for the purposes specifically intended by the manufacturer. Carefully follow the instructions on operation, maintenance and repair.
- This Cleaner is not suitable for use by children and people with reduced physical, sensory or mental capabilities or inexperienced people who are not familiar with the product. Children should be supervised to ensure that they do not play with the appliance, even when it is not in operation.
- Operators who perform maintenance must be fully conversant with its special features and safety regulations. Before using the cleaner, carefully read the operating manual and make sure you understand the instructions.
- Only use original spare parts, do not change the design of the Cleaner, do not remove, bypass or tamper with the safety devices installed. The manufacturer shall not be held liable if non-original spare parts are used. Failure to comply with this requirement may seriously endanger the health and safety of people.
- Ensure the cleaner is turned off before performing any adjustment or maintenance that the user is authorized to perform. Cleaning and maintenance must not be performed by children.
- Do not use the cleaner if the top cover or brushes are damaged.
- Never use and recharge the cleaner in explosive and/or flammable environments.
- Only use the battery charger supplied by the manufacturer. Improper use may cause electric shocks, overheating or leakage of corrosive liquids from the battery.
- If any liquid leaks, wash the cleaner with water/neutralizer; in case of contact with eyes, seek medical attention. Liquid ejected from the battery may cause irritation or burns.
- If the battery charger is damaged, have it replaced by the manufacturer or an authorized Zodiac dealer. DO NOT attempt to service the battery charger. A damaged cord can lead to contact with live parts.
- The product contains magnets and components that emit electromagnetic fields. The magnets and electromagnetic fields can interfere with pacemakers, defibrillators and other medical devices. Keep a safe distance between the medical device and the product. Consult your doctor or the manufacturer of the medical device for specific information about it. If you think that the product is interfering with a pacemaker, defibrillator, or any other medical device, stop using the product starting from the distance at which you feel interference.
- Do not smoke around, or allow the cleaner to be near sparks or flames. The batteries can generate gases which could possibly ignite.
- If at any time you detect any physical damage to the cleaner chassis, such as swollen or cracked casing, STOP and do not continue discharging or charging the battery.
- Never attempt to disassemble a battery pack. A battery can produce a short circuit causing severe burns. Avoid contact between any wires or metal items that could cause sparking and short circuit the battery. If a battery leak occurs, avoid any contact with the leaking fluids and place the cleaner in a plastic bag. Wear complete eye protection, gloves and protective clothing when disposing of cleaner. If leaking fluids come in contact with skin and clothing, wash immediately with plenty of soap and water. If leaking fluids come in contact with eyes, do not rub eyes, immediately flush eyes with cool running water for at least 15 minutes and do not rub them. Seek medical attention as soon as possible.
- Do not use a battery operated appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Connect unit to receptacle protected by Residual-current circuit breaker with over-current protection (RCBO). Such a RCBO receptacle should be provided by a qualified installer and should be tested on a routine basis. To test the RCBO, push the test button. The RCBO should interrupt power. Push the reset button. Power should be restored. If the RCBO fails to operate in this manner, the RCBO is defective. If the RCBO interrupts power to the pump without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. Do not use this product. Disconnect the cleaner and have the problem corrected by a qualified service representative before using.

Alkaline batteries:

- Operating Temperature: 10° to 40°C:
- Do not leave batteries or LIFI remote exposed to high temperature, direct sunlight, or inclement weather.
- Keep battery out of reach of children. Swallowing can lead to chemical burns, performance of soft tissue, and death. Severe burns can occur within 2 hours of ingestions. Seek medical attention immediately.
- Risk of explosion if the battery is replaced by a different type of battery or mishandling.
- Risk of explosion if the battery is disposed of in a fire or hot oven, crushed mechanically, dismantled or cut.
- Respect the battery polarity.
- This appliance LIFI remote contains non-rechargeable batteries. Do not recharge the battery.
- If you do not use the remote control for more than two months, please remove the batteries. Otherwise, battery leakage may damage the remote control.
- The battery must be disposed of properly. Recycling is required. Contact your local authority for more information.

LITHIUM-ION batteries:

- A battery can produce a short circuit causing several burns.
- If a battery leak occurs, avoid any contact with the leaking fluids and contact a professional to replace the battery.
- If leaking fluids come in contact with skin and clothing, wash immediately with plenty of soap and water.
- If leaking fluids come in contact with eyes, do not rub eyes. Immediately flush eyes with cool running water for at least 15 minutes and do not rub them. Seek medical attention as soon as possible.

⚠ WARNING

- Do not enter pool while the Zodiac pool cleaner is in water.
- To reduce the risk of electrical shock, do not use the Zodiac robotic cleaner or charging station if the cord is worn or damaged. Contact Zodiac Customer Care Service at 1300 763 021 for Australia or 0800 807 665 for New Zealand immediately for proper servicing and replacement of the damaged cord.
- Do not use a battery pack or battery operated appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Double insulation—For continued protection against possible electric shock, use only identical replacement parts when servicing. Do not attempt repair of the Zodiac robotic cleaner, charging station, or power cord.
- DO NOT USE AN EXTENSION CORD TO CONNECT THE CHARGING STATION TO ELECTRIC SUPPLY; PROVIDE A PROPERLY LOCATED RCBO RECEPTACLE.
- NEVER OPEN CHARGING STATION.
- UNDER ABUSIVE CONDITIONS, LIQUID MAY BE EJECTED FROM THE BATTERY; AVOID CONTACT. LIQUID EJECTED FROM THE BATTERY MAY CAUSE IRRITATION OR BURNS. IF CONTACT ACCIDENTALLY OCCURS, FLUSH WITH WATER. IF LIQUID CONTACTS EYES, SEEK MEDICAL ATTENTION.
- DO NOT EXPOSE A BATTERY PACK OR APPLIANCE TO FIRE OR EXCESSIVE TEMPERATURE. EXPOSURE TO FIRE OR TEMPERATURE ABOVE 265°F/130°C MAY RESULT IN AN EXPLOSION.

Battery Life & Disposal of Li-Ion Batteries

- Regulations and laws pertaining to the recycling and disposal of Li-Ion batteries vary from country to country as well as by state and local governments. You should check the laws and regulations where you live.
- There are a number of facilities that recycle Li-Ion batteries. The Battery Stewardship Council's web site, <https://bsc.org.au/> provides information on where these types of batteries can be disposed of for recycling and is an excellent source for finding a facility to handle these types of batteries. If you are not sure if your waste facility can handle Li-Ion batteries, contact them and verify if they are permitted or not.
- Remember that before any type of disposal the batteries should be discharged completely. Tape the cleaner charging contacts with electrical tape and package so as to prevent contacts accidentally coming together at any time.
- This cleaner contains a maintenance-free, rechargeable lithium ion battery pack, which must be disposed properly. Recycling is required.

Battery Charger

- Use ONLY the battery charger provided with this appliance.
- The battery charger must be connected only to a supply circuit that is protected by a ground-fault by a RCBO.

PREVENT CHILD INJURY AND DROWNING

- To reduce the risk of injury, do not permit children to operate this product. The appliance is not a toy for children.
- Do not let anyone, especially small children, sit, step, lean, or climb on any equipment installed as part of your pool's operational system.

⚠ CAUTION**Failure to comply with the following warnings could cause damage to pool equipment or personal injury.**

- The Zodiac cleaner must be installed and operated as specified.
- This product is intended for use with permanently-installed pools. Do not use with storable pools. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity.
- Clean the filter canister in the Zodiac cleaner after each use.
- Do not use the product in your pool if the water temperature is above 35°C or below 13°C.

USE OF THE ZODIAC ROBOTIC CLEANER IN A VINYL LINER POOL

- Certain vinyl liner patterns are particularly susceptible to rapid surface wear or pattern removal caused by objects coming into contact with the vinyl surface, including pool brushes, pool toys, floats, fountains, chlorine dispensers, and automatic pool cleaners. Some vinyl liner patterns can be seriously scratched or abraded simply by rubbing the surface with a pool brush. Ink from the pattern can also rub off during the installation process or when it comes into contact with objects in the pool. Zodiac Group Australia Pty. Ltd. is not responsible for, and the Limited Warranty does not cover, pattern removal, abrasion or markings on vinyl liners.

Section 2. Cleaner Specifications

2.1 General Specifications

The general specifications for the cleaner are as follows:

⚠ WARNING

Only use the battery charger supplied with the cleaner.

Charging Station Supply Voltage	100-240 VAC; 50/60 Hz
Supply Voltage	29.4 V DC
Battery Capacity	9.6 Ah
Operating Power	29.4 W
Cleaner Size (WxDxH)	41 x 42 x 28 cm
Weight of Cleaner	9.1 kg
Packed Weight	15.5 kg / FR1000 iQ 16.5 kg / FR2000 iQ
Filtration	All-purpose filter canister
Cycle Lengths	Variable programming
Charge Temperature	Max 35°C Min 5°C
Water Temperature Range	Max 35°C Min 13°C
Operating Depth	Max 4 m Min 40 cm

The cleaner is a double-insulated product. A double-insulated electrical appliance is one which has been designed in such a way that it does not require a safety connection to ground. The basic requirement for double-insulation is that no single failure can result in dangerous voltage becoming exposed so that it might cause an electric shock and that this is achieved without relying on an earthed (grounded) metal casing. This is achieved by having two (2) layers of insulating material surrounding live parts or by using reinforced insulation. Therefore, devices having double-insulated construction, such as this cleaner, do not use a grounded (three-prong) cord/plug.

2.2 Contents

The packaging should contain the following items:

- Freerider™ Cleaner
- Charging Station
- Removal Hook
- Transportation Caddy*
- Remote Control*

* Model FR2000 iQ

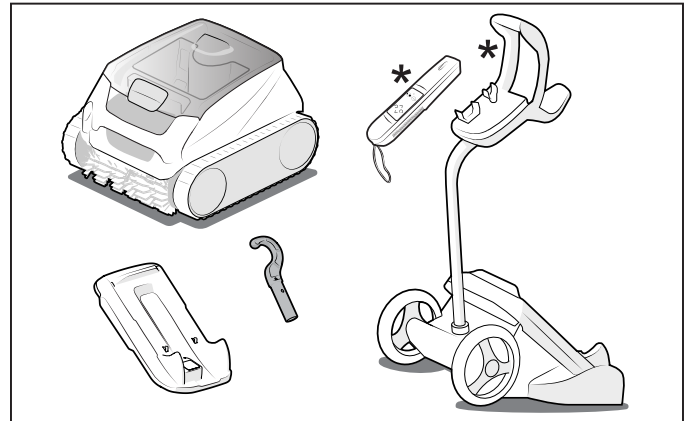


Figure 1. Contents

2.3 Assemble the Charging Station

1. Insert the top of the charging station foot (marked with a blue dot) into the top rear of the charging station (also marked with a blue dot). Push the lower part of the foot into the lower cavity of the charging station until clip is secure.
2. Attach the hook clip to either charging station foot. Attach the hook to the clip.
3. Run cable through either foot cable slot.

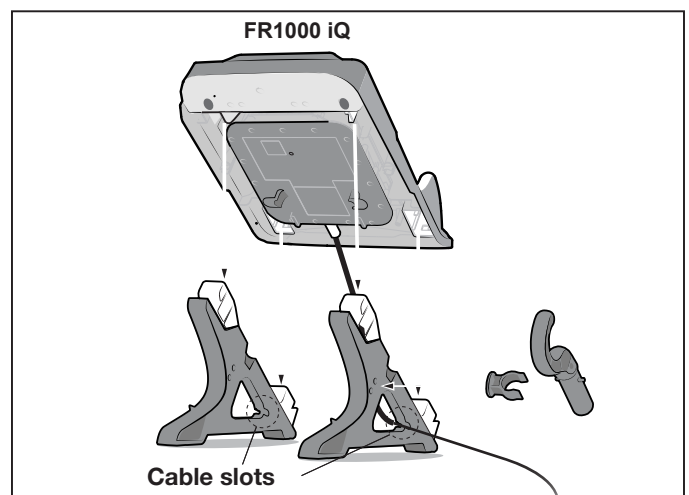


Figure 2. Assemble Charging Station

Refer to the trolley assembly document for trolley assembly instructions.








⚠ WARNING

Failure to comply with the following warnings can result in permanent injury, electrocution or drowning.

PREVENT ELECTRICAL SHOCK AND FIRE

- Keep the charging station at least 3.5 m from the edge of the pool.
- The cleaner is to be installed in accordance with the relevant requirements of the Australian wiring rules AS/NZS 3000. Also refer to the installation instructions relating to the swimming pool equipment for which the cleaner will be an integral part.
- Only connect the charging station to a receptacle protected by Residual-current circuit breaker with over-current protection (RCBO). Contact a certified electrician if you cannot verify that the receptacle is protected by a RCBO.
- Do not use an extension cord to connect the charging station.
- Do not allow anyone to swim while the cleaner is in the pool.
- Follow all charging instructions and do not charge cleaner outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

2.4 Information/Status LEDs

Battery Status 	Solid Green	Fully charged.
	Blinking Green	Ready to run a full cycle (2 h 30 min).
	Solid Orange	Not fully charged. May not run a complete floor & wall cycle.
	Blinking Orange	Very low battery level. Charge required. Cannot run cleaner.
	Blinking Red	Charging error. Cleaner is too hot.
Wi-Fi Connection Status 	Blinking Blue	Pairing.
	Solid Blue	Connected to Wi-Fi.
Operating Status 	Blinking Blue	Out of Water: Ready to submerge, start cleaning. In Water: End of cycle. Waiting for removal from pool.
	Blinking Red	Error.
Cleaning Mode (Additional cleaning modes available in app. If app mode selects either Floor Only or Floor+wall, only the selected LED lights ON. If in the App, waterline or smart mode is selected, then both LED lights ON.)	Cleaning mode via cleaner or the APP Floor Only (1 h 30 min)  Floor, walls, and waterline (2 h 30 min) 	App only cleaning mode Smart mode, floor, walls, and waterline  Waterline (00 h 45 min) 

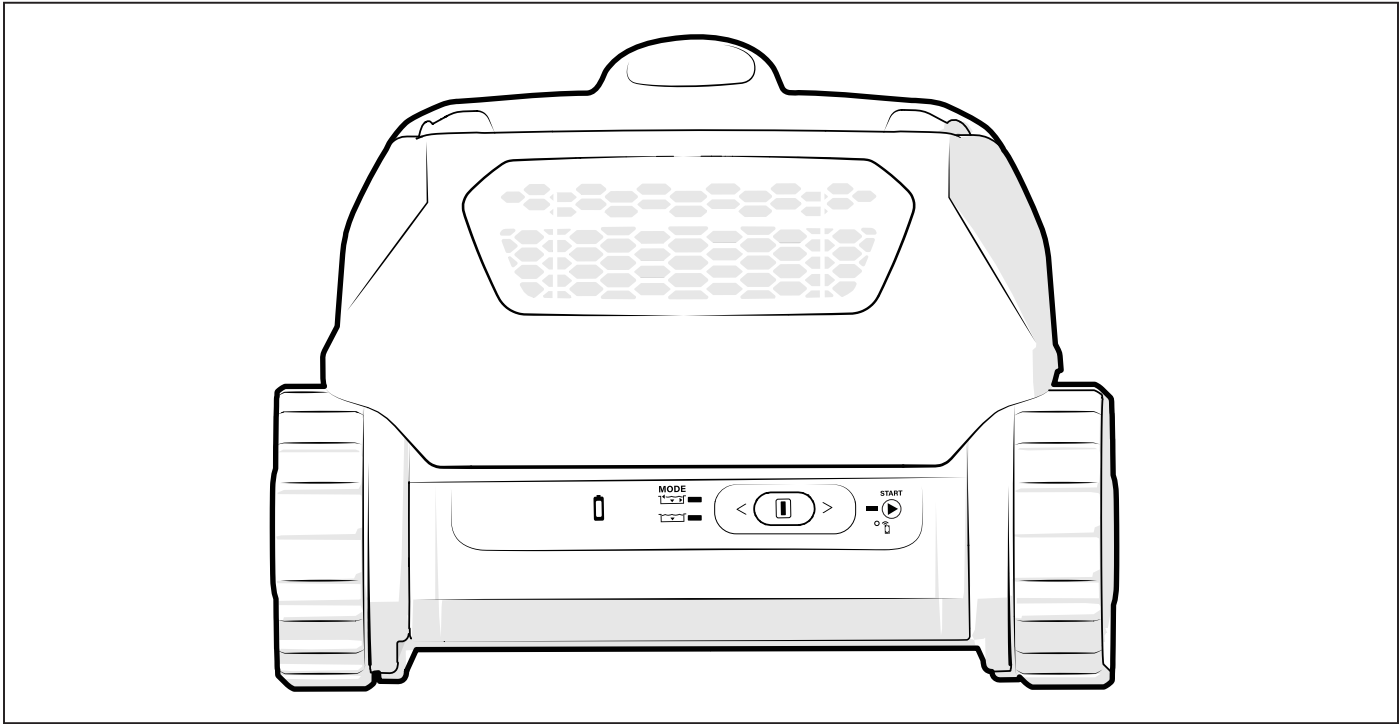


Figure 3. Information/Status LEDs

2.5 Charging Station Status*

Solid Green	Base is receiving power
Solid Red	Charging is in progress
Blinking Green	Charging station needs to be replaced

*The charging station LED indicator light should not be confused with the battery indicator light on the cleaner. The charging station LED identifies if the charger is providing power to the cleaner.

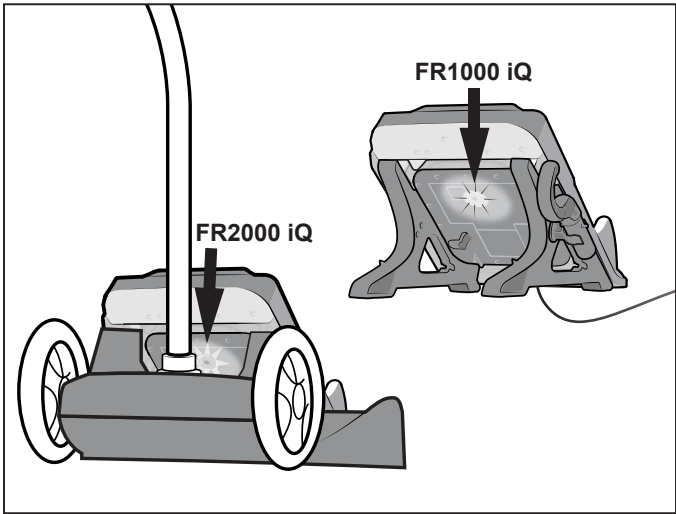


Figure 4. Charging Station Status LED

Section 3. General Cleaner Operation

⚠ CAUTION

To prevent damage to the cleaner, be sure to adhere to the following guidelines:

- Remove the cleaner from the pool after the cleaning cycle is completed.
- Store out of direct sunlight or inclement weather.
- For retrieval, pickup at waterline when notified by app or use the manual retrieval hook. For FR2000 iQ, use the remote control to activate Lift system if necessary and retrieve at waterline.
- Take additional care when lifting the cleaner out of the pool. It becomes heavier when filled with water.
- Always remove the cleaner from pool when super chlorinating or adding acid.
- Do not handle cleaner while it is in operation.
- Ensure that the cleaner is not in running mode before handling.

⚠ WARNING

DO NOT use an extension cord with the charging station

- Follow all charging instructions and do not charge outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- When charging, cleaner must NOT be exposed to direct sunlight, rain or inclement weather, heat ignition sources, pool and spa chemicals or water. DO NOT position cleaner and charging station on direct contact with soil.
- Charging station is outdoor-rated.

IMPORTANT

- Start the cleaner, then fully submerge in the water to start cleaning cycle.
- At the end of each cycle, remove the cleaner from the pool and recharge.
- Clean the filter canister after each cleaning cycle.
- Do not leave your cleaner in the pool on a permanent basis.

The Zodiac robotic cleaner includes a safety feature that automatically stops the cleaner if it is powered on but not submerged in water. For pools equipped with a beach area, this safety feature is programmed to drive the cleaner in reverse and back into the pool when the impeller is out of the water.

3.1 Set Up and Charging

1. Select a charging location (RCBO outlet) at least 3.5 m away from the pool, out of direct sunlight, rain or inclement weather, and with adequate Wi-Fi strength.

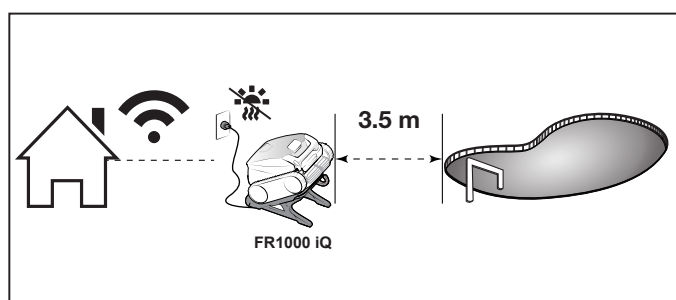


Figure 5. Charging Location

2. Align the cleaner and charging station with the wall for easier access to the controls and handle.
3. Plug charging station into RCBO.
4. Seat cleaner on charging contacts. The cleaner will “beep” and begin charging.

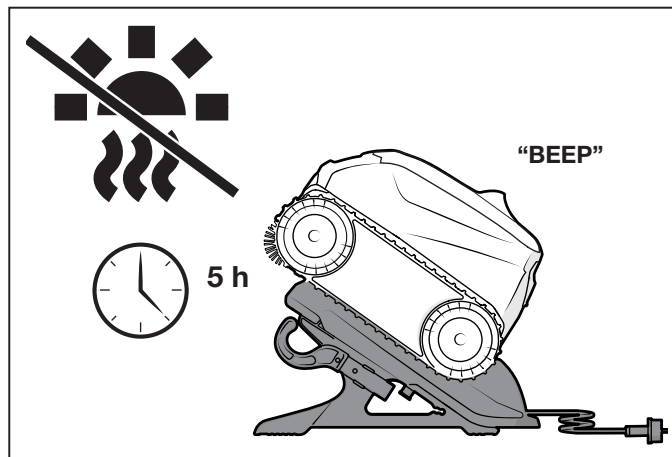


Figure 6. Plug in Charging Station and Seat Cleaner

NOTE: Battery LED will blink orange when charging and solid green when complete.

5. Fully charge the cleaner before every cleaning. The battery LED will be solid green when fully charged. Charging takes approximately 5 hours.
6. Check the current charge level in the App whenever the cleaner is on the charging station.
7. The cleaner goes into deep sleep after 8 days of inactivity to protect the battery. When all indicators are off, the cleaner is in sleep mode. Re-set the cleaner on the charging base to wake up. If this does not work, see Troubleshooting.

NOTE: For best results, dry the cleaner and base charging contacts before charging. Periodically clean the charging contacts. See maintenance section.

3.2 Start Cleaner

1. Select Cleaning Mode using the slider by sliding and releasing to the left or by using the App.

Cleaning Mode	Select	Runtime
Floor/Wall	Product or App	2.5 hrs
Floor	Product or App	1.5 hrs
SMART	In App	Calculated
Waterline	In App	0:45 min

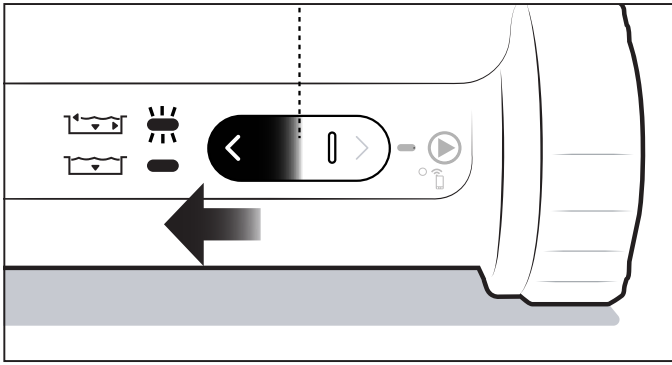


Figure 7. Slide and Release Left to Select Mode

NOTE: Choose Floor Only mode to clean with Pool Cover on.

3.3 Install and Submerge the Cleaner

1. Start the cleaner using the slider by sliding and releasing to the right or use the App.

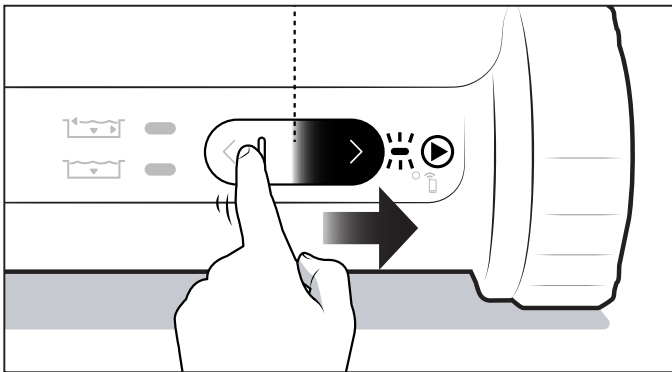


Figure 8. Slide and Release Right to Start

2. The cleaner does not begin moving until it senses water. A blinking blue LED light means it is ready to clean.
3. At the center point, submerge the cleaner in the pool and hold in the vertical position to release any air trapped inside.

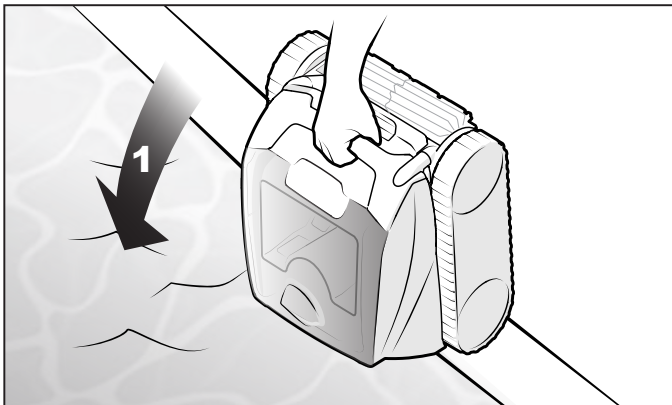


Figure 9. Submerge the Cleaner Vertically

4. Wait for bubbles to stop completely, then let the cleaner sink to the bottom of the pool.

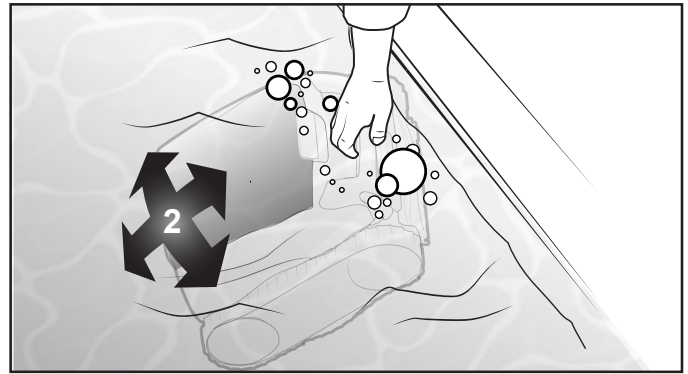


Figure 10. Cleaner Sinking to the Bottom of the Pool

5. Cleaning cycle will start as soon as the cleaner detects the pool floor.

⚠ WARNING



Do not enter pool while the robotic cleaner is in water.

3.4 Remote Control

The LiFi remote control for models FR2000 iQ uses light signals to communicate underwater with the cleaner. Use the remote to start/stop a cleaning cycle, direct the cleaner, or remove the cleaner from the pool. Bright sunlight may interfere with the signal. Hold tip of remote underwater pointing at the cleaner's antenna to send a command. Maximum distance between remote control and cleaner is 7m. The remote is water resistant up to 30cm and floats if dropped in water.

1. Place the end of the handheld remote control in the pool and direct it towards the cleaner's antenna.

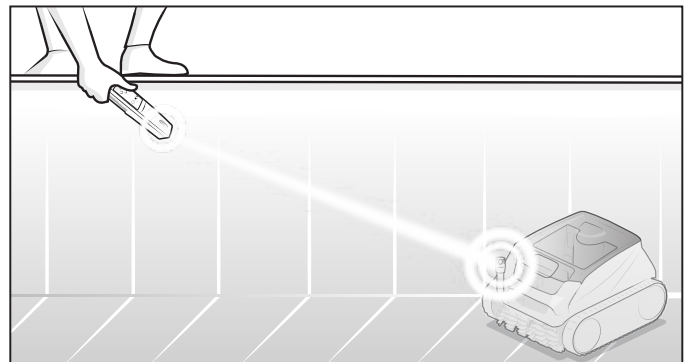


Figure 11. Remote Control End in the Pool

2. Press to start or stop the cleaner. Press the arrows to navigate cleaner.

NOTE: Cycle interruption will occur with any usage of remote control during a cleaning cycle. Cleaning cycle will restart from the beginning. Do NOT leave remote fully submerged for extended periods.

3.5 Removal

3.5.1 Lift System Retrival with Remote Control

The Lift System is designed to assist in retrieving the cleaner from the pool. Lift System can be activated at any time during or after a cleaning cycle.

1. Place the end of remote control in the pool and press Lift System to begin automated procedure.
2. The cleaner will drive forward and up the nearest wall it is facing. It will wait at the waterline to be retrieved.

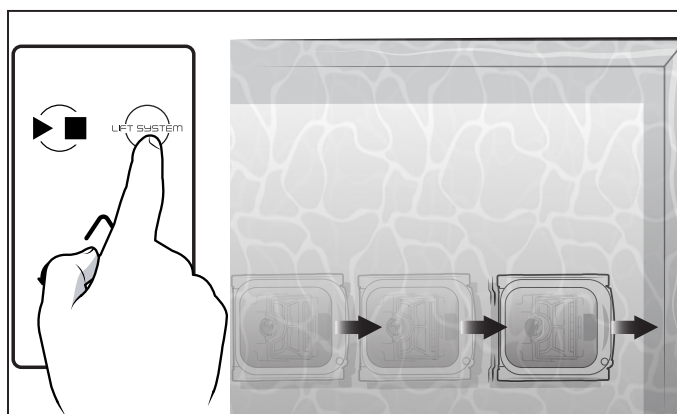


Figure 12. Cleaner Drives to Wall

3. When in reach, remove the cleaner from the pool using the handle. The cleaner will quickly expel water to allow for lighter, easier removal.

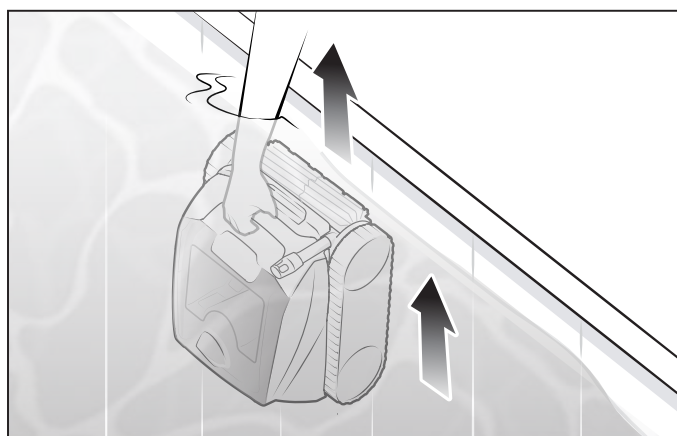


Figure 13. Remove Cleaner

3.5.2 Waterline Retrieval

1. At the end of the cleaning cycles (other than Floor Only), the cleaner climbs and waits at the waterline.
2. If the cleaner is not retrieved after 30 seconds, it moves to a different wall.

NOTE: If the cleaner is not removed at the waterline, it will return to the floor at the end of the cycle.

3. If not retrieved after 10 minutes, the cleaner returns to the pool floor for retrieval with the hook and pool pole.
4. If connected to the iAquaLink® app, you will receive push notifications to your mobile device alerting you to remove the cleaner.
5. Remove cleaner at the waterline by using the handle and it will expel water to make it lighter.

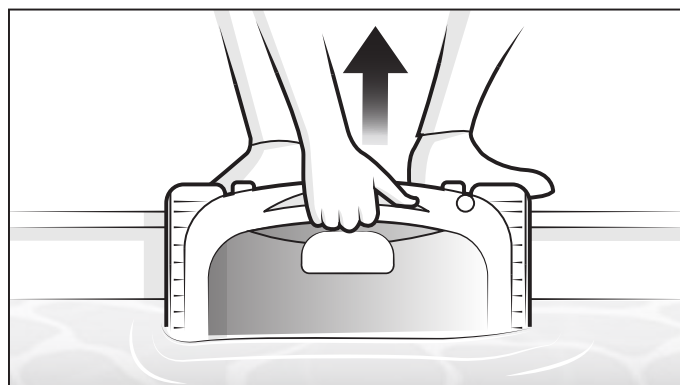


Figure 14. Remove the Cleaner

3.5.3 Tap & Lift™ Retrieval

1. After the cycle is complete, attach the hook (stored on the charging caddy) to a standard pool cleaning pole (not included).

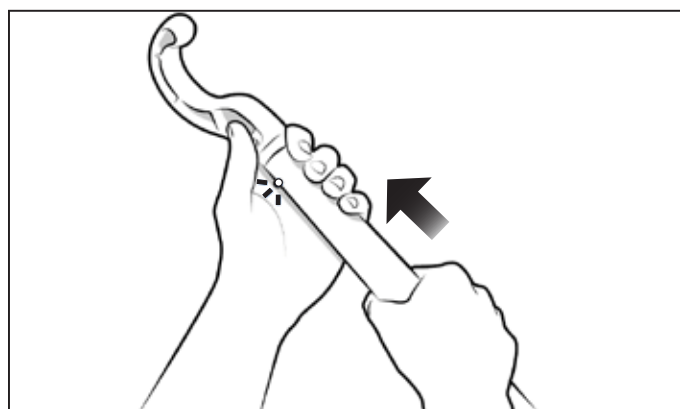


Figure 15. Attach Hook

2. Tap cleaner lid once (x1). The cleaner will drive to the wall it is facing and climb to waterline.

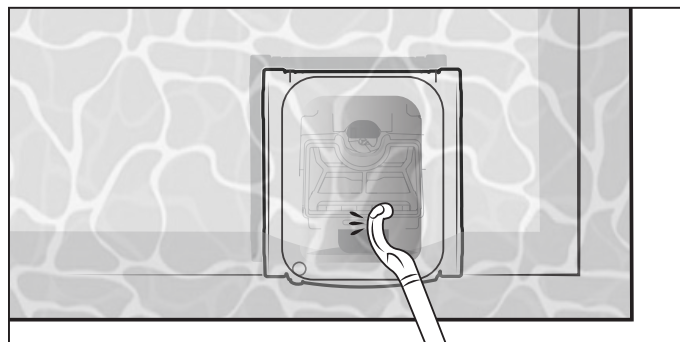


Figure 16. Tap & Lift™

3. Remove using the handle. Water will expel to make it lighter.

3.5.4 Manual Retrieval

1. Attach the hook (stored on the charging station) to a standard pool cleaning pole (not included).

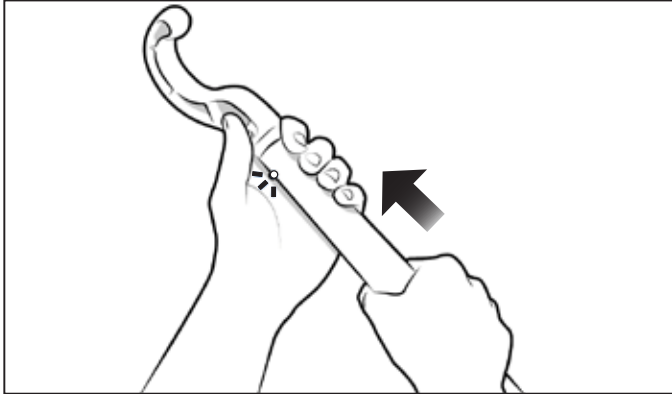


Figure 17. Removal Hook

2. Secure the hook on the cleaner handle. Bring the cleaner to the waterline.

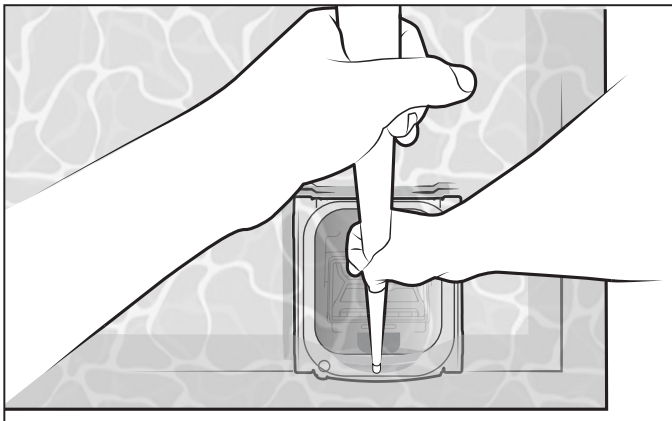


Figure 18. Secure the Hook

3. Pull up the cleaner by the handle and hold vertically to let the water drain into the pool.



Figure 19. Drain the Cleaner

4. Charge the cleaner on the charging station out of direct sunlight.

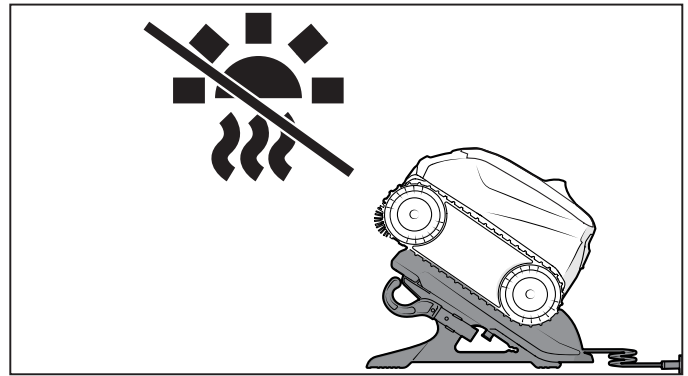


Figure 20. Store the Cleaner

NOTE: For best results, dry the cleaner and base charging contacts before charging. Periodically clean the charging contacts. See maintenance section.

3.5.5 Remove with Remote Control (Freerider™ FR2000 iQ)

1. Press Lift System button on the remote control. The cleaner will drive to the nearest wall.
2. The cleaner drives up the wall and waits at the waterline.
3. Remove cleaner at the waterline by using the handle.

Section 4. Installing iAquaLink®



The iAquaLink app is available for download from the App Store or Google Play.

With iAquaLink Control, you can connect to your robotic cleaner from anywhere, anytime to access many functions and troubleshooting advice. App features are dependent on model.

Before you begin installation, make sure you have the following:

- Robotic cleaner is on charging station
- Charging station is connected and plugged into a RCBO outlet
- Smart device (phone) with Wi-Fi and Bluetooth enabled
- A Wi-Fi router broadcasting a 2.4Ghz wifi network with sufficient signal strength at the charging station

IMPORTANT

Have your Wi-Fi network password available

4.1 Download the App

Install or update the **iAquaLink** app from the App Store or Google Play.

Once the download is complete, select the **iAquaLink icon** on your smart device to open the app.



4.2 Sign Up and Log In

Click **Sign Up** to create a new user account. Or, if you previously set up an iAquaLink account, click **Log In** to access your systems.

Complete all required fields in the Account Setup page and agree to the Terms and Conditions.

4.3 Configure the System

1. On the My Systems page, click **+** in the upper right-hand corner to add a system.
2. Choose "Robotic Cleaner" from the list and choose your model type.
3. Follow on screen prompts to pair your cleaner.
4. Slide the slider right and **HOLD** for ten seconds to put the cleaner in Pairing Mode.

Wi-Fi LED Indicates Connection Status	
	<i>BLINKING</i> - pairing
	<i>SOLID</i> - connected to internet

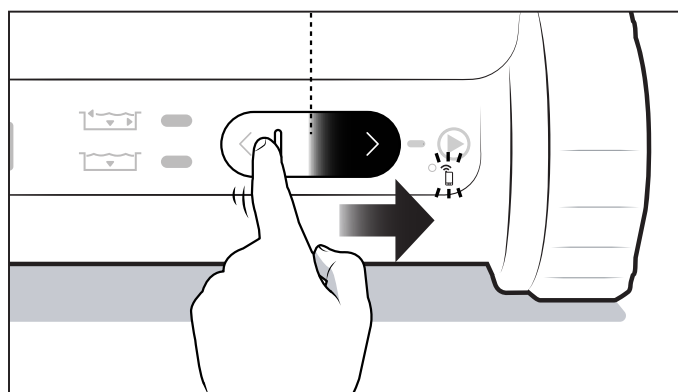


Figure 21. Slide and Hold Right to Pair

5. Follow on-screen prompts to add your cleaner and connect to your home router.

NOTE: If you have problems connecting, the Wi-Fi signal may not be strong enough next to the pool. Try placing the charging station in another location closer to your home router (see *iAquaLink Troubleshooting* section.)

Section 5. iAquaLink® Control

Once you have downloaded the iAquaLink app and connected the device to Wi-Fi, the iAquaLink app allows for robotic cleaner control from anywhere, anytime. Functions vary within the iAqualink app depending on which cleaner model you have.

IMPORTANT

During cleaning cycles while in water, the cleaner will not have connection to the WiFi. Once the cycle is complete place the cleaner back on the charging stand to reconnect to the WiFi.








⚠ WARNING



Do not enter pool while the robotic cleaner is in water.

5.1 iAquaLink® Control Home Screen


App function and design is subject to change.

	Start Cleaning
	Clean Mode
	Battery Charge Status
	Green Charged: Fully Charged
	Green Charging: Ready For Use
	Orange Charging
	Orange Partially Charged

5.2 Set Cleaning Mode

Start Cleaning

The factory default cleaning surface setting is Floor/Wall.

- From the Home screen, press the Start button  to begin cycle. The cleaner will start when it detects water and will cancel the cycle if not submerged after 5 minutes.

NOTE: At the beginning of each cleaning cycle, the robot confirms your pool parameters (approximately 10 minutes). During this time, the cleaner does not climb to the waterline.

- From the main screen, select **Cleaning Mode** to view options.
- Select Cleaning Mode. The factory default cleaning mode is Floor/Wall.

Cleaning Mode	Select	Runtime
Floor/Wall	Product or App	2.5 hrs
Floor	Product or App	1.5 hrs
SMART	In App	Calculated
Waterline	In App	0:45 min

SMART Cycle

SMART Cycle calculates a customized cleaning time optimized for your pool. On the first run of SMART Cycle, the app counts up as it calculates the optimized cleaning time.

On periodic SMART Cycle cleaning, the app will count down from the optimized cleaning time.

NOTE: To Recalculate SMART Cycle, go to the Set Cleaning Mode after the initial calculation.

5.3 In-App Error Messages and Troubleshooting

If an error occurs, after removing the cleaner from the water, the status bar will show a warning symbol and: "Cleaning Interrupted".

- Click on the warning symbol to view troubleshooting advice on how to fix the issue.
- Choose **Clear Error** if you believe you have fixed the problem and want to re-try. Choose **OK** if you want to suspend the cleaner in error mode and work on the troubleshooting fix at a later time.

5.4 System Settings

Access System Settings by pressing the gear icon in the upper right hand corner of the app screen.

Section 6. Maintenance

WARNING

To avoid electric shock and other hazards which could result in permanent injury or death, disconnect (unplug) the cleaner from the power source before performing any cleaning and maintenance.

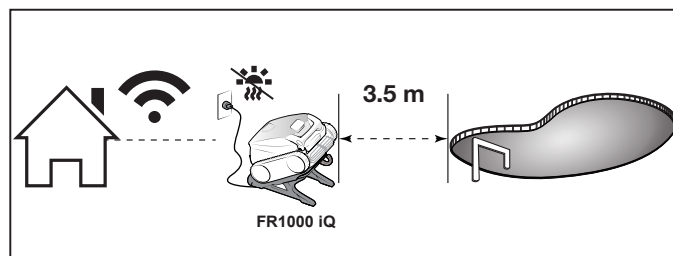


Figure 22. Charging Station Distance to Pool Edge

6.1 Clean the Cleaner and Charging Station

- Always dry the cleaner before setting on the charging station.
- Clean the charge plates ON the charging station using a cloth or scouring pad. DO NOT use metal sponges or brushes and solvents or salt water.

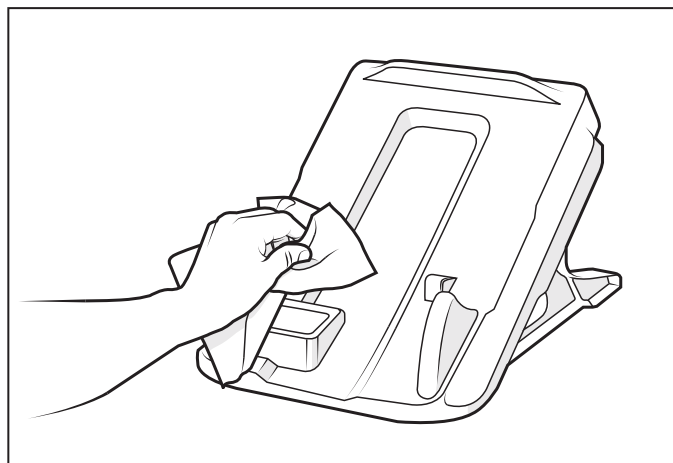


Figure 23. Clean the Charge Plates

- Clean the charge plates UNDER the cleaner using a cloth or scouring pad. DO NOT use metal sponges or brushes and solvents or salt water.
- Rinse the cleaner and charging station thoroughly with clean water.
- Dry the cleaner and charging station with a towel. DO NOT leave the cleaner and charging station to dry in the direct sun.

6.2 Clean the Filter Canisters

The filter canisters should be cleaned at the end of each cycle.

1. Push the cover lock and lift the cover until it is secured in the vertical position.

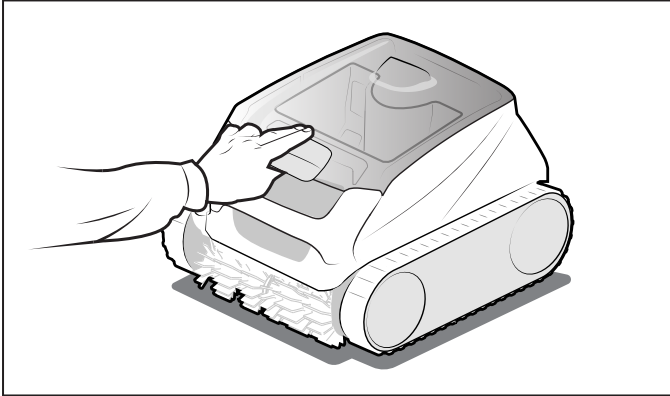


Figure 24. Lift Cleaner Cover

2. Remove the filter canisters assembly from the body.
3. Empty all debris from the filter canisters, then rinse the filters and the cleaner using a hose.

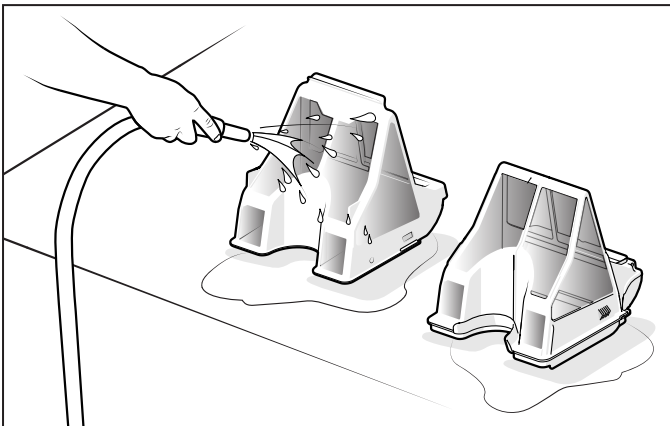


Figure 25. Remove and Wash the Filter Canisters

NOTE: Periodically, remove the filter canisters and clean thoroughly with soapy water and a soft bristle brush

4. Replace the filter canisters into the cleaner.
5. Store the cleaner on the charging station out of direct sunlight.

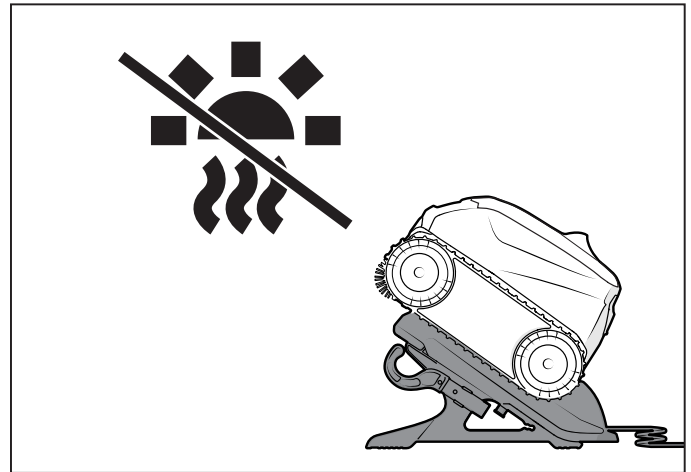


Figure 26. Store Cleaner on the Charging Station

NOTE: We recommend to let the cleaner dry before being positioned on the charging station.

6.3 Storage

Everyday Storage

Store the cleaner in a protected and dry place with an ambient temperature between 10°C and 21°C, out of reach of children, pets, other foreign objects, etc.

- Never store or dry the cleaner in direct sunlight.
- DO NOT expose cleaner to fire, excessive temperatures, ignition sources, or pool and spa chemicals.
- DO NOT leave the cleaner in the water when not in use.

Long-Term & Winter

Remove the cleaner from the pool and drain all water to avoid freezing water damage (freeze damage is not covered under warranty).

For long term storage, it is recommended to store the cleaner at 80-100% of battery capacity (indicated by solid GREEN battery LED).

You may either:

- Leave the cleaner and charging station connected until next use.
- Disconnect and recharge the cleaner at the start of season.

Store cleaner and charging station out of direct sunlight, rain or inclement weather.

6.4 Replacing Wear Parts

6.4.1 Replacing Brushes

The cleaner is fitted with PVC brushes with a “wear” indicator.

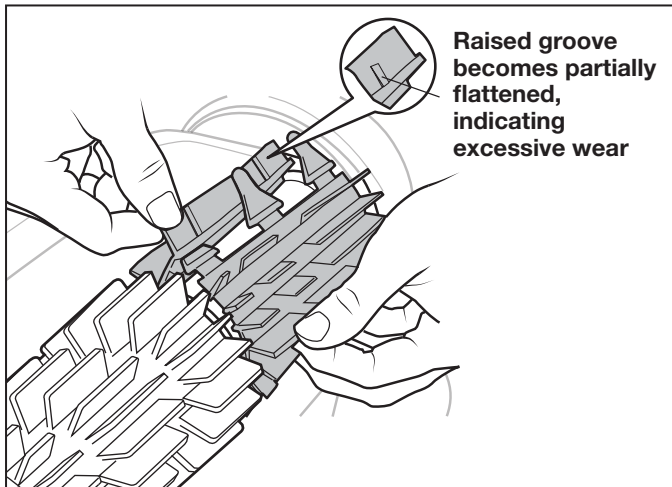


Figure 27. Worn Brush Indicator

To maintain cleaner performance at its best you need to replace the brushes as soon as one of the wear indicators is reached (even if the blade wear is not even). It is recommended that you replace the brushes when the rubber is worn down to the top of the wear indicator (or every two years, whichever comes first).

To replace a worn brush:

1. Lift the cleaner to a vertical position so that the handle is up.

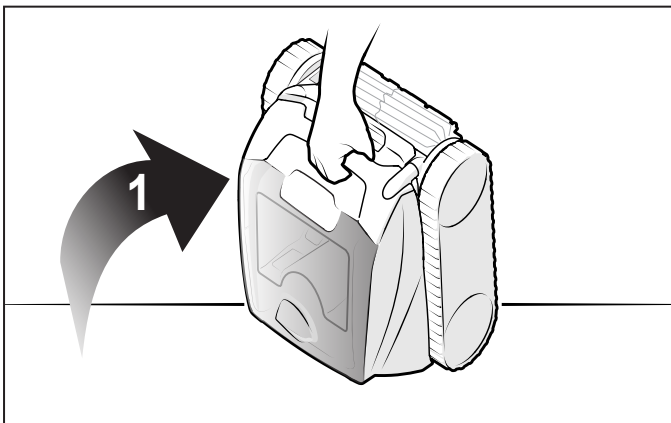


Figure 28. Cleaner in Upright Position

2. Separate the edges of the brush and undo the tabs. Remove the worn brushes.

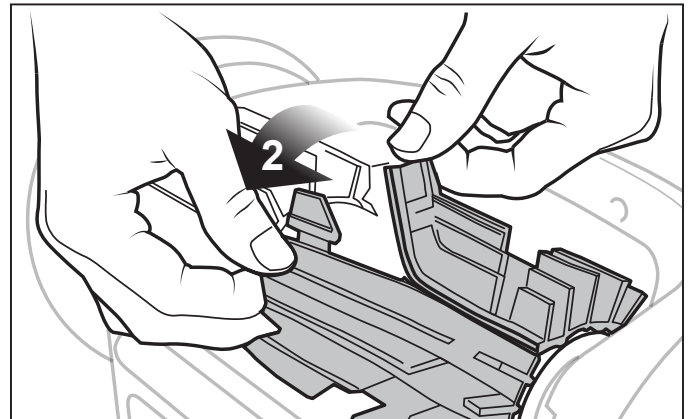


Figure 29. Undo the Tabs of the Brush

3. To install the new brush, position the new brush on the roller with the cleaning blades facing away from the roller.

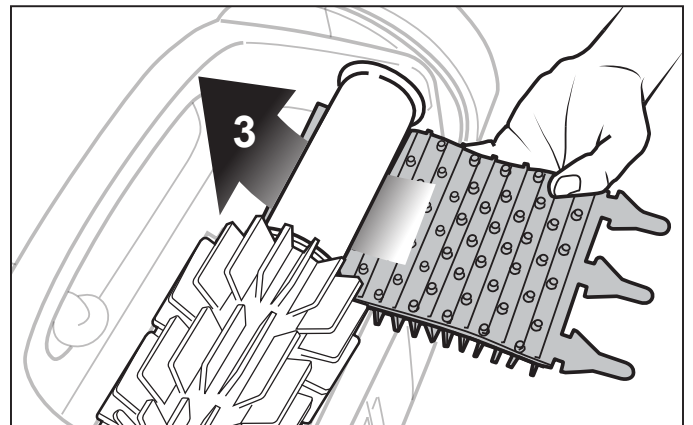


Figure 30. Install the New Brush

4. Thread each tab into the slot provided and gently feed it through until the heel comes out at the other side of the slot.

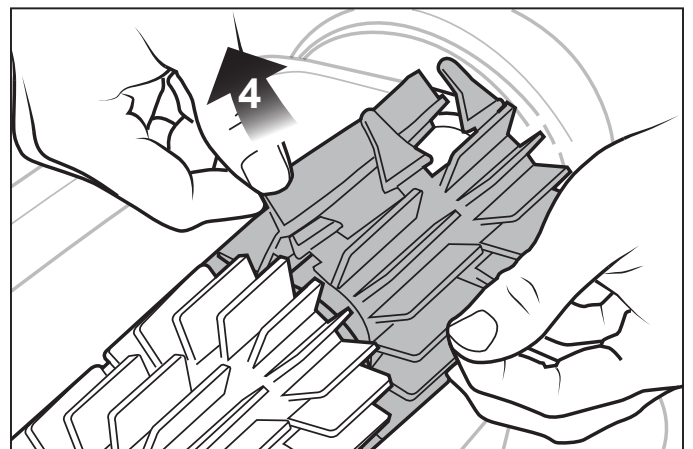


Figure 31. Pull Tabs Through Each Slot

5. Use a pair of scissors to cut the tabs 3/4 inch from the heel so that they are no higher than the cleaning blade.
6. Repeat the procedure to install the second brush.

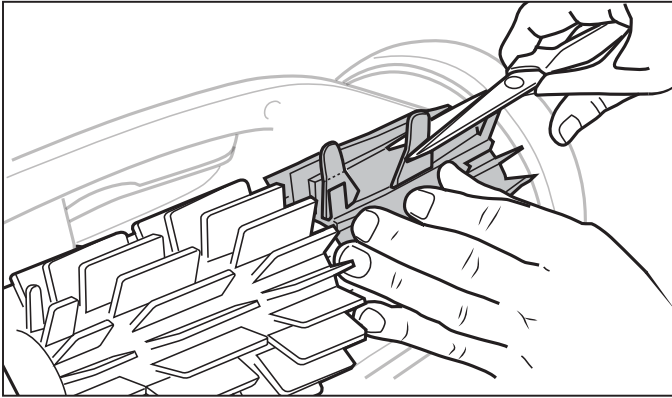


Figure 32. Cut Tabs

6.5 Replacing Tracks

1. Pull on the inside of the old track to remove the track lip from the front wheel.

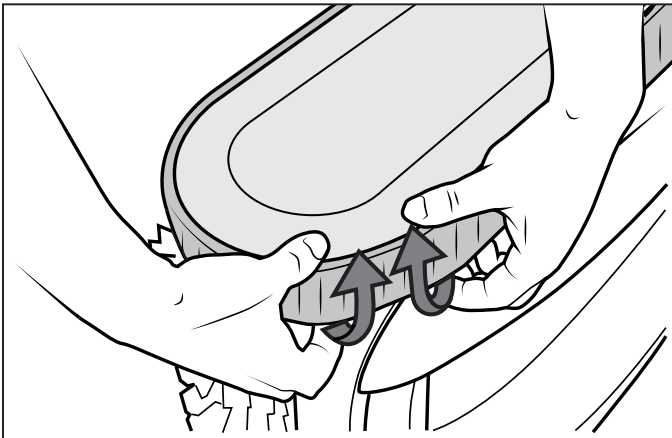


Figure 33. Pull the Old Track Over the Wheel

2. Remove the old track from the front wheel, then remove track from the rear wheel.

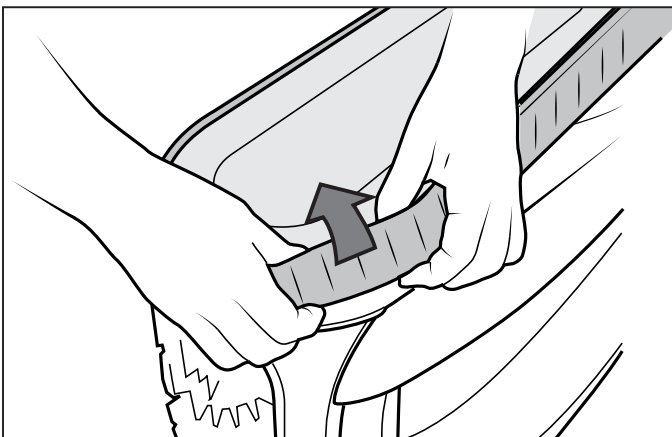


Figure 34. Remove the Old Track

3. Replace the track on the wheel by positioning the rib toward the body of the cleaner.

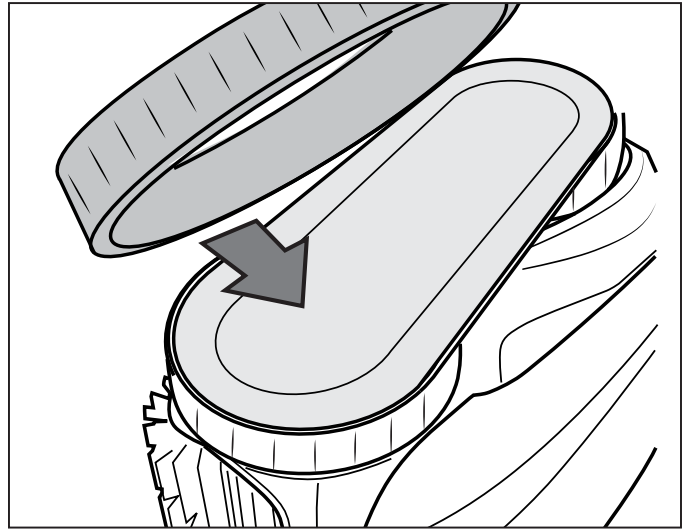


Figure 35. Track Replacement Orientation

4. Push one side of the track on to the wheel and fit the rib of the track in the groove of the wheel.

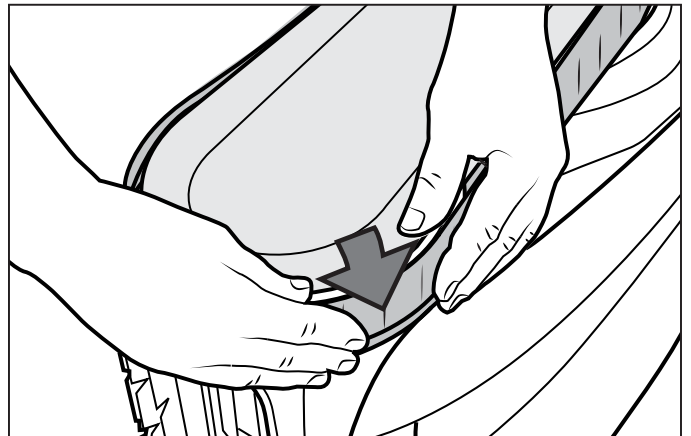


Figure 36. Start on One Side of the Track

5. Work the track onto the front wheel and verify the rib of the track is positioned properly within the groove of the wheel.

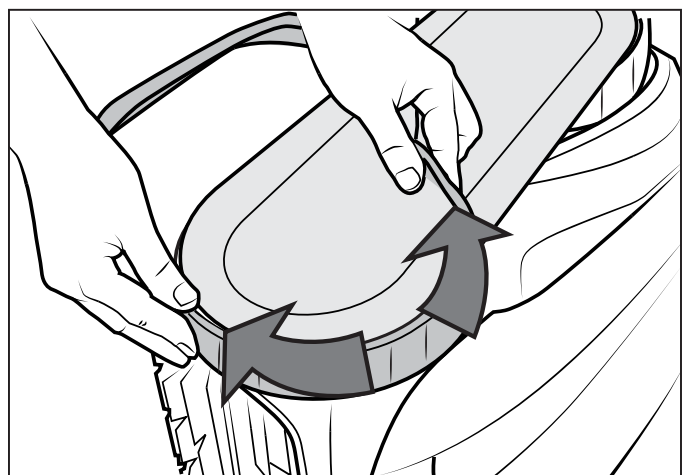


Figure 37. Work the Track On Around the Wheel

6. Push and position the rib of the inner side of the track in the groove of the rear wheel. If needed, turn the wheel gently to help with installation.

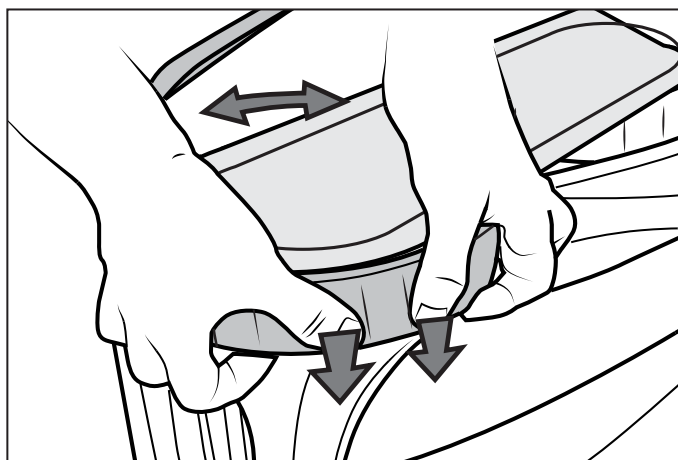


Figure 38. Push the Track into Place on the Wheel

7. Work the track onto the rear wheel and verify the rib of the track is positioned properly within the groove of the wheel.
8. Push and position the rib of the inner side of the track in the groove of the rear wheel. If needed, turn the wheel gently to help with installation.

6.6 Recycling & Disposal

The battery is not a serviceable or replaceable component. DO NOT attempt to service the battery.

Battery and cleaner must be disposed of in accordance with local requirements.

Always dispose of batteries in a sustainable way in approved collection bins or at authorized collection centers in accordance with local law. Contact your local authority for more information.

Section 7. Troubleshooting

Information about the cleaner status and any relevant condition will be displayed in the iAquaLink® app while the cleaner is on the charging station.

7.1 General Troubleshooting

The following list provides some helpful hints for troubleshooting common challenges when using the cleaner.


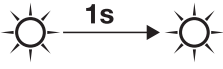
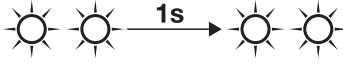
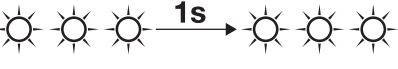
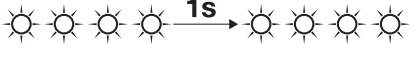
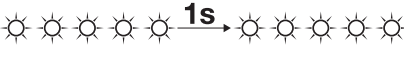
User Issue	Possible Cause	Suggested Solution
The cleaner does not stay on the pool surface or is floating excessively.	There is air trapped inside the cleaner housing.	Remove cleaner from pool and re-submerge (see <i>Install and Submerge the Cleaner</i>).
	The filter canister is full or dirty.	Dispose of debris and thoroughly clean the filter canister with mild soap and a soft brush. Then, re-submerge the cleaner (see <i>Clean the Filter Canister</i>).
The cleaner is not climbing walls.	The filter canister is full or dirty.	Dispose of debris and thoroughly clean the filter canister with mild soap and a soft brush. Then, re-submerge the cleaner (see <i>Clean the Filter Canister</i>).
	Track treads worn down.	See <i>Replacing Wear Parts</i> .
	Confirm appropriate pool chemistry.	Speak with your pool service professional. Do not leave cleaner in the pool during any chemical treatments.
	Product in Floor Only mode.	Select Floor/Wall cleaning mode.
The cleaner does not respond to the remote control.	Bright sunlight may interfere with the signal.	Hold tip of the remote underwater pointing at the cleaner's antenna to send a command. Maximum distance between remote control and cleaner is 7m.
	Cleaner may not have enough battery to respond to the commands of the remote control.	Use the retrieval hook to remove cleaner. Recharge cleaner for next use.
	Remote control LED light blinks red.	Replace AA batteries in remote control.

User Issue	Possible Cause	Suggested Solution
The cleaner is not moving.	The cleaner may not be charged.	The outlet the charging station is connected to is not supplying electrical power. Check that the outlet to which the charging station is connected is receiving electricity.
	Cycle not started.	Remove from water and start the cleaner using the slider by sliding and releasing to the right or use the App.
	Reset needed.	Turn off the cleaner using the slider by sliding to the left and hold for 20 seconds. Then, place the cleaner on the charging station to wake it up. If the problem is not resolved, contact your local retailer to request a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
The cleaner does not fully charge.	Dirty charging contacts.	If the cleaner does not charge after 6 + hours of charging, clean the charging contacts on both cleaner and charging station with a cloth and non salt water. Dry the cleaner before putting on the charging station after each cycle use. If the underside of charging station is blinking green it will need to be replaced.
The cleaner is not cleaning the pool effectively.	Filter canister is full or dirty.	Dispose of debris and thoroughly clean the filter canister with mild soap and a soft brush. Then, re-submerge the cleaner (see <i>Clean the Filter Canister</i>).
	Brushes are worn.	Check the wear indicator(s) (see <i>Replacing Wear Parts</i>).
	The cleaner is not fully charged.	Charge the cleaner.
The cleaner does not collect debris or go forward.	Debris jamming traction motor.	Remove any debris in the front brush area.


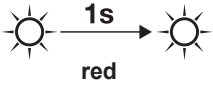
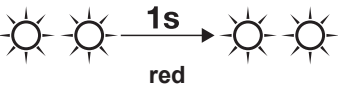
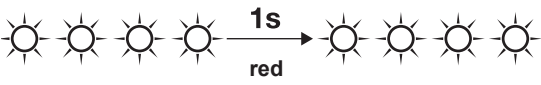
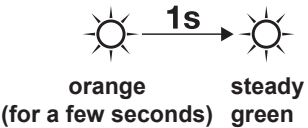
7.2 Charging Station Behavior

User Issue	Cleaner Behavior	Charging Station Behavior	Suggested Solution
The cleaner will not charge	The battery LED on the cleaner does not blink when the cleaner is on the charging station.	The charging station is connected but the LED under the station is off or blinking (instead of green) when the cleaner is placed on it.	<ul style="list-style-type: none"> The cleaner is not positioned correctly on the charging station. Clean charging contacts on the cleaner and the charging station with a cloth and fresh non salt water. The charging station is faulty, contact your retailer for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
		The LED under the charging station is green when the cleaner is placed on it.	
	The battery LED on the cleaner blinks red 4 times when the cleaner is on the charging station.	<ul style="list-style-type: none"> The charging station is plugged into a RCBO outlet. The charging station LED is green when the cleaner is placed on it. 	<ul style="list-style-type: none"> Clean charging contacts on the cleaner and the charging station with a cloth and fresh non salt water.
	The battery LED on the cleaner blinks orange for a few seconds or minutes then switches to solid green when cleaner is on the charging station.	<ul style="list-style-type: none"> The charging station LED is red when the cleaner is placed on it. 	<ul style="list-style-type: none"> Remove the cleaner from the charging station. If the battery LED on the cleaner turns off instead of indicating the charge level the battery needs replacing.


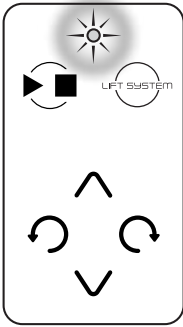
7.3 Cleaner Error Codes

On/Off	Blinking Red	Error #	Display in the iAquaLink® App	Solutions
		10	Communication Error	<ul style="list-style-type: none"> The cleaner board is under power but does not respond. Contact your service center for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
		14	Motor Block Error	
		2 & 3	Traction Motor Right/Left	<ul style="list-style-type: none"> Check that debris is not preventing the brushes or tracks from moving freely. Rotate each wheel by a quarter of a turn in the same direction until it rotates smoothly. Repeat turning wheels in the opposite direction until rotation is smooth. Contact your service center for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
		5 & 6	Drive Motor Consumption Right/Left	
		7	Cleaner Floating	<ul style="list-style-type: none"> Thoroughly clean the filter canister. Restart the cycle, then submerge cleaner in the water and shake to release air bubbles. Contact your service center for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
		8	Cleaner Out of the Water	
		1 & 4	Pump Motor	<ul style="list-style-type: none"> Turn off the cleaner using the slider by sliding to the left and hold for 20 seconds while off of the charging station. No LEDs will be illuminated. Check for small debris or hair in the fan impeller. Thoroughly clean the filter canister. Contact your service center for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
		31	Antenna Error	<ul style="list-style-type: none"> The antenna is damaged and the cleaner cannot be controlled with the remote. Contact your service center for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
		12	Firmware Update Error	<ul style="list-style-type: none"> Close the iAquaLink® app. Check that the cleaner is connected to the Wi-Fi network (the LED is solid blue). If the indicator is not steady, open the iAquaLink™ app, select the cleaner and click on "Update".

7.4 Battery Error

On/ Off	Blinking	Error #	Display in the iAquaLink® App	Solutions
		20 & 21	Battery Error	<ul style="list-style-type: none"> The battery block needs to be replaced. Contact your retailer for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.
		22 & 23	Charging Error (Too hot) Charging Error (Too cold)	<ul style="list-style-type: none"> The temperature detected at the charging station location is outside of the recommended temperature range for recharging the cleaner 5°C - 40°C. Charging is paused until temperature is within normal range. Move charging station to a new location.
		25	Charging Error	<ul style="list-style-type: none"> Clean the charge plates (located on the underside of the cleaner and on the charging station base) with a cloth and fresh water (non-salt water).
		No Code	Battery Error	<ul style="list-style-type: none"> Remove the cleaner from the charging station. If the battery indicator turns off instead of indicating the charge level of the cleaner: the battery is obsolete and needs replacing. Contact your retailer for a diagnostic review or contact Technical Support at 1300 763 021 for Australia or 0800 807 665 for New Zealand.

7.5 Remote Error *

Remote	Blinking	Possible Cause	Solutions
	<p>red blinking LED</p> 	Remote Battery Power is Low	<ul style="list-style-type: none"> Remove battery cover and replace both AA batteries.

*Model FR2000 iQ only

7.6 Dismissing an Error Code


From the iAquaLink® App:

Press the error icon to display troubleshooting solutions. After you have completed the troubleshooting solution steps, press Clear Error to return to normal operation. Or, press OK if you need to complete the solution steps at a later time.

7.7 iAquaLink® Troubleshooting

This information can help to troubleshoot connection and setup challenges between the iAquaLink app and the cleaner.

How it works:

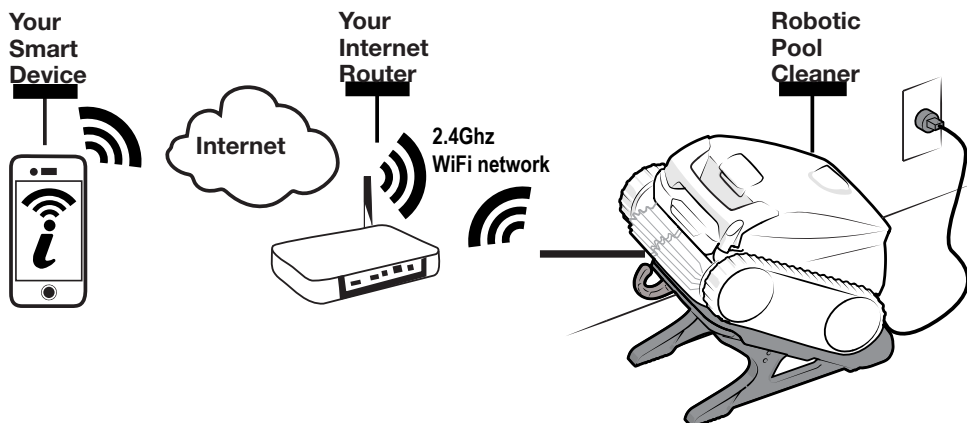

IMPORTANT

Most of the cordless robotic app functions only work when the cleaner is out of water and on the charging station.

How to connect:

You must connect to the home router (network) with your smart device which will communicate with the cleaner. (See *Configure the System*.)

The device can only connect to a 2.4Ghz wifi network. Consult your network or wifi equipment provider for assistance.

IMPORTANT


It is recommended to locate the charging station as close to the home router as practical. Do not use an extension cord.

Common iAquaLink® Troubleshooting

Remember, if you get a new Wi-Fi Router, reset the defaults of your current Wi-Fi Router or simply change your Wi-Fi network password, you will have to re-establish the connection between your cleaner and the router. (See: Configure the System.)

User Issue	Possible Cause	Suggested Solution
Wi-Fi light is off.	Bright sunlight	Shield the lights to block sunlight and re-check if the lights are lit.
	Charging station is unplugged.	Plug the charging station into a RCBO outlet (see <i>Connect to a Power Source</i>).
	Power outage.	Verify that the breaker is on and electricity is being supplied to the outlet.
	Lost internet connection.	Check internet connection - network may be down.
	Router is off.	Turn router on.
	Router password was changed.	Reset router with new password.
Wi-Fi light is flashing.	Lost internet connection	Check internet connection - network may be down.
	Weak Wi-Fi signal.	<ul style="list-style-type: none"> • Check for adequate Wi-Fi signal strength. • With a Windows laptop, go to Network Connections in the Control Panel. Check Signal Strength meter under Wireless Network Connection icon while standing near the charging station. • With a smart device, search for, download, and use an app that can check signal strength while standing near the charging station. If Wi-Fi signal is weak, consider installing a Wi-Fi extender.
	Connectivity issue with local Wi-Fi or connection to the server.	Contact your local internet service provider. <ul style="list-style-type: none"> • Unplug your charging station and wait 10 seconds. Plug in the box again and see if lights illuminate. • Check Internet connection - network may be down.
Wi-Fi light is on but buttons and functions are disabled.	Firmware update in progress.	“PROG” is displayed in the app during an over-the-air firmware update. Simply wait for button functions to resume after update completes. Do not unplug from power during an update.

NOTES

<p>WARRANTY REGISTRATION</p>	<p>Record your equipment details here for quick reference:</p> <p>Model No.: _____</p> <p>Serial No.: _____</p>
	<p>AUSTRALIA WARRANTY:</p> <p>For full warranty terms and conditions and to register your warranty, visit www.zodiac.com.au/warranty and complete your details.</p> <p>◀ Or scan the QR code to go directly to the registration page.</p>
	<p>NEW ZEALAND WARRANTY:</p> <p>For full warranty terms and conditions and to register your warranty, visit www.zodiac.co.nz/warranty and complete your details.</p> <p>◀ Or scan the QR code to go directly to the registration page.</p>